



1. Clean the garbage and check if the gap is equally wide and straight.

2. Make level

3. Apply a high-strength self-leveling grout to the base of the blockouts to provide a continuous, solid, flat and level base for the joint cover. (Note: The blockouts must be level across the width of the joint.) Mark Frame location.

4. Reposition the Assembly over the joint and align the edge of the Frames with Frame location mark

5. Remove Assembly and drill holes for Meishuo supplied anchors

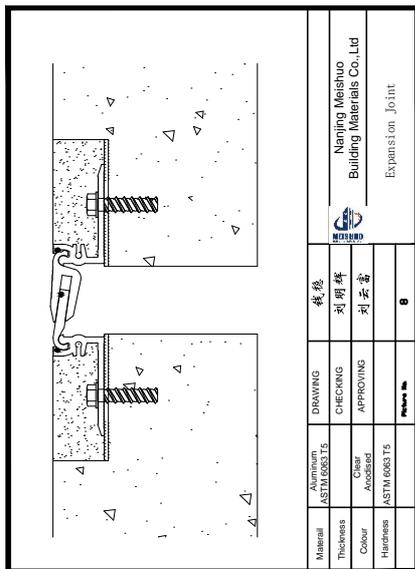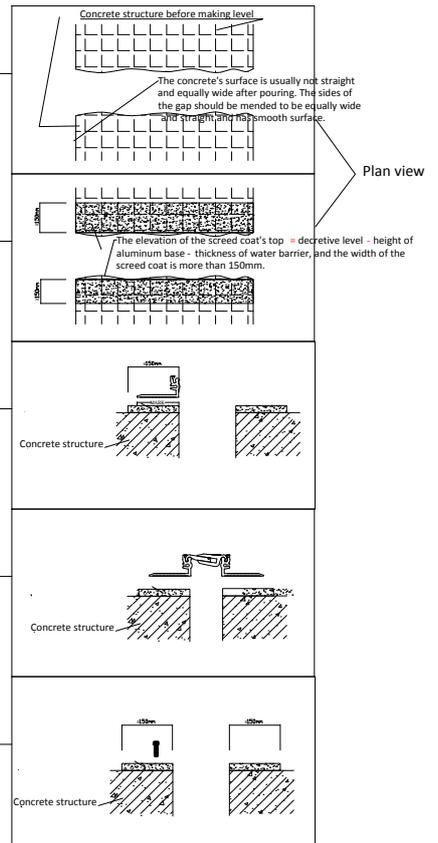

6. Place Assembly back over joint and fix with anchors.

7. Remove Clips from Expansion Joint Cover Assembly.

8. Insert Alignment Pins into alignment slots of the next length of Frame. Insert the Pin approximately 1/2 of its length.

9. Align Pins with previous installed section of Assembly alignment slots. Install additional Assemblies.

11. Installation finish.

