


材料 Material	规格 Specification	数量 Quantity	备注 Remarks
厚度 Thickness	颜色 Colour	长度 Length	重量 Weight
密度 Density	表面处理 Surface Treatment	公差 Tolerance	其他 Others
图号 Drawing No.	页号 Page No.	Picture No. 45	

材料 Material	规格 Specification	数量 Quantity	备注 Remarks
厚度 Thickness	颜色 Colour	长度 Length	重量 Weight
密度 Density	表面处理 Surface Treatment	公差 Tolerance	其他 Others
图号 Drawing No.	页号 Page No.	Picture No. 45	

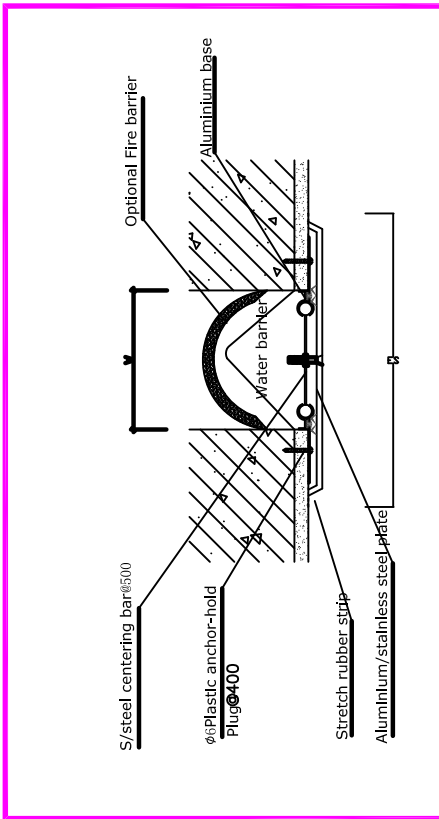


材料 Material	规格 Specification	数量 Quantity	备注 Remarks
厚度 Thickness	颜色 Colour	长度 Length	重量 Weight
密度 Density	表面处理 Surface Treatment	公差 Tolerance	其他 Others
图号 Drawing No.	页号 Page No.	Picture No. 45	

1. Clean the garbage and check if the gap is equally wide and straight.

2.If the width of the joint width is not the same, make the chalk line at the widest place and cut the extra parts.

3.Install the water barrier. The side line of water barrier can't cover the ink line snapped.(Brush the special glue on the surface of the screed coat and the lower surface of the water barrier. After the glue is almost air drying, put the water barrier on the screed coat.)

4.Install the aluminum frame and make sure the aluminum frame of two sides are on the same width and height. Make the decorative level.

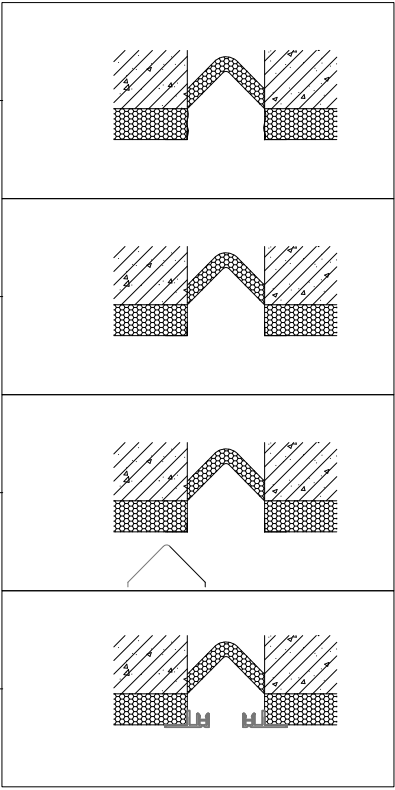

5.Nail the scree to make sure the base in on a straight line. Or when the centering bar bolt is screwed down, the aluminum plate must be mismatched.

6.Install the gasket on the aluminum frame.

7.Install the centering bar and lean it as 45° with the aluminum base. According to the screw hole of the aluminum palte,confirm the location of the centering bar screw. Sign on the decorative level.

8.Place the centering bar as the sign and place the plate. Fix the screw from one side to another side.

9. Tighten the screw arbor on the plate. Installation finish.

